

CAMPER ENLCOSURES – CARE AND MAINTENANCE

Camper top enclosures are intended for short holiday use only. They are not designed or warranted for semi or permanent accommodation.

1. Never leave your camper enclosure un-attended for long periods.
2. Caring for your marine canvas is essential when it comes to preserving the life of your equipment. Unkempt camper tops and boat covers, especially, are prone to rip, tear, or leak when not cared for properly.
3. Camper enclosures, pontoon enclosures and convertible tops should be removed if severe winds. Failing to do so may result in boat damage and injury.
4. Camper tops, convertible tops, all side curtains, cockpit and bow cover must all be removed when trailering. Bimini top should be laid flat. Damage will occur to canvas and boat if attached to boat while trailering.

----- WARNING -----

Keep all flame and heat sources away from marine fabrics. The fabric is resistant to flame however is not fireproof, and will burn if in continuous contact with flame. For this reason do not use open flames, or cook inside your boat top enclosure, and ensure BBQ is lit well away from the boat top.